



## Home safety equipment scheme equipment information

This document provides an overview of the different pieces of equipment that can be installed as part of the Home Safety Equipment Scheme. It is designed for homeowners to understand the different pieces of equipment, their purpose and the installation process, including any potential permanent changes to the residence.

Item	Purpose	Installation process	Permanent?
<b>Safety gate</b> (Based on the use of either the KR2 or Multidan gates which are your normal usage.)	Prevents access to stairs or rooms. The gate is opened with a button and a lift handle.	The safety gate is fixed and needs to be screwed into position on walls or door frames.	No. Holes from the screws will need to be filled when the item is removed.
<b>Fire guard</b>	Maintains a distance of 300mm from an open fire, reduces risk of accidental touching and burns.	The fire guard is free standing but has to be secured to the wall either side of the fire.	No. Holes from the screws will need to be filled when the item is removed.
<b>Pop it lock</b>	Prevents access to double cupboards or drawers.	Initial placing uses an adhesive pad but final securing must be by the screws included.	No. Holes from the screws will need to be filled when the item is removed.
<b>Bathmat</b>	Provides more grip on the floor of baths and showers to reduce the chance of accidental slips and falls.	The bathmat is secured with suction cups on the underside of the mat.	No.
<b>Door jammer</b>	Prevents doors from being fully closed.	The door jammer is simply placed at the desired location, on the door. Jammer can be removed after the child has gone to bed and placed in	No.



Item	Purpose	Installation process	Permanent?
		the holder, to allow the door to be fully closed.	
<b>Blind cord cleats</b>	Reduce the risk of strangulation by providing a point for cords, strings and ropes to be stored out of reach of children.	The item is secured into the wall using screws.	No. Holes from the screws will need to be filled when the item is removed.
<b>Cupboard lock</b>	A lock that is opened using a magnetic key. The item is used to prevent access to cupboards or drawers.	The equipment is in 2 parts. One piece is secured to the drawer or door and the other to the inside of the cupboard. Both parts are initially aligned using the adhesive pads while extra security is obtained by fixing with the screws provided.	No. Holes from the screws will need to be filled when the item is removed.
<b>Corner cushion</b>	Stops children accidentally hitting their heads on corners of tables, countertops or other similar items with sharp or pointed corners.	The item is secured to the table or cabinet with adhesive pads.	Yes. The adhesive pad should be considered permanent. Removal can damage weak veneers or poor quality surfaces.